

# ROUNDLINE

## Dimensioneringsguide

Så här väljer du radiatorer i förhållande till utetemperatur och rumsstorlek.

Lägsta utetemperatur	300 W	600 W	800 W	1000 W	1200 W	1500 W
-40°C	1-3 m <sup>2</sup>	3-6 m <sup>2</sup>	6-8 m <sup>2</sup>	8-10 m <sup>2</sup>	10-12 m <sup>2</sup>	12-15 m <sup>2</sup>
-30°C	1-4 m <sup>2</sup>	4-7 m <sup>2</sup>	7-10 m <sup>2</sup>	10-12 m <sup>2</sup>	12-15 m <sup>2</sup>	15-19 m <sup>2</sup>
-20°C	1-5 m <sup>2</sup>	5-9 m <sup>2</sup>	9-13 m <sup>2</sup>	13-15 m <sup>2</sup>	15-19 m <sup>2</sup>	19-24 m <sup>2</sup>

Tego Kundtjänst 0418-45 58 20



TEGO SYSTEM AB, Box 43, SE-261 22 Landskrona, Tel +46 (0)418 - 45 58 00, Fax +46 (0)418 - 45 58 01  
info@tego.se, www.tego.se