

# MANUAL


## Roundline Reco MASTER

Master can be used in many different ways. You can use it as a central control that is connected to all the heaters within 30 meters. You can set it to a day temperature and a night temperature, which you then can alternate by pushing ☀ or ☾.



The Roundline Reco Master can also be connected to external equipment e.g. a GSM-caller or a timer, and in this way make the night temperature lower automatic, or call and raise the temperature in your summer house. The setting for day and night temperature is done on the key pad, but the switch between the different settings is done through the external equipment. It can be used with the Roundline Reco room thermostat. The heaters will respond to the room units as long as the Roundline Reco is in a "OFF mode", but when the Roundline Reco Master is in an "On mode" it takes over the room thermostats. This way you can regulate every room separate, but still force a nightly lowering of the temperature that applies to all the heaters.

Below you can read how you can install, set and use your Roundline Reco Master. We recommend that you read through the manual carefully before you start the installation. If anything should be unclear, or if you have any questions, you can reach our customer support at +46 418 45 58 25.

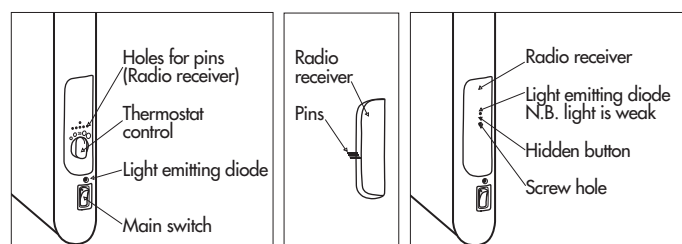

### INSTALLATION

- Turn off the heater with the main power switch.
- Turn the heater thermostat control to 20°C.
- Plug the radio receiver carefully into the heater. Check that all of the five pins on the radio receiver are placed correctly into the corresponding holes on the heater, and that the radio receiver easily fits in the right position.
- Secure the RF-plug in its position with the enclosed screw.
- Turn on the heater with the main switch (position 1).

### CONNECTING THE HEATERS AND THE ROUNDLINE MASTER

Now all the radio receivers are in place and the power switches are turned on.

- Open the back of the Roundline Reco Master by pushing it down. Connect the supplied cord to the connection on the circuit board. The display is now activated.
- Press the MODE and ON/OFF buttons on the Reco Master at the same time. Keep them pressed down for 3 seconds. A countdown off 30 seconds is shown in the display window.
- Within the 30 seconds you have to press the hidden button on the RF-plug, using a needle or a paper clip. The RF-plug and the Reco Master are now searching for each other. When they have established a connection a green steady light (N.B. faint) will be visible on the RF-plug. The green light will disappear when the count down of the Reco Master is done and will remain turned off. The Reco Master is now connected with the heater.
- If you did not have time to connect all the heaters with the Reco Master during the 30 seconds, repeat the procedure, (Holding both the MODE and ON/OFF button for 3 seconds on the Reco Master, and during the count down press the hidden button on the RF-plug), and continue with the remaining heaters.
- The heaters that are connected have a built in memory that allows them to remember the connection even if there is a power failure. By pressing the MODE and ON/OFF button at the same time you can check and see if all the heaters are connected with the Reco Master. On all the heaters that are connected a light will turn on, on the RF-plug for the count down of 30 seconds, which will be shown on the display. The heater is not connected with the Reco Master if the light is not lit. See further under troubleshooting. If any of the lights on the RF-plugs start blinking it means that they have lost connection. See further under troubleshooting.
- The RF-plug can be connected to both a Reco room unit and a Reco Master at the same time. If you wish to delete one of the units from the RF-plug memory just do a reset. This action deletes all connections to other units and the installation of the RF-plug has to be done from the beginning. The reset is done by turning off all the heaters on the power switch, pressing the hidden button on the RF-plug and keeping it pressed down as you turn on the heater again on the power switch. Then keep the hidden button pressed down for 3 more seconds and the memory is reset.

### FUNCTIONS

There are three temperature settings in Roundline Reco Master; Day temperature(\*), night temperature(\*\*) and stand-by(\*\*\*). Day and night temperature can be set to any temperature between 5 and 35 degrees, and the stand-by is locked at 5 degrees. You can choose how you want the connections between these different settings should be, either by manually pressing the button on the Reco Master front panel, or an external unit through the limit switch screw connection on the back of the Reco Master. You can also choose if the Reco Master is going to communicate directly with all the heaters, or if you want Reco room thermostats, which enables individual temperatures in different rooms.

### INSTALLATION OF DESIRED BASIC FUNCTION

Start the installation of your Roundline Reco Master by choosing the right basic functions. The following are the choices:

- "Key operated" or "Externally controlled"
- "Reco Room thermostats available" or "No Reco Room thermostats available"

Choose the mode that best suits your installation by pressing the following buttons:

- Press Mode and - at the same time to activate "Key operated"
- Press Mode and + at the same time to activate "Externally controlled"
- Press Mode and ☀ at the same time to activate "Room thermostats available"
- Press Mode and ☾ at the same time to activate "No room thermostats available"

### DESCRIPTION OF THE DIFFERENT OPERATION MODES

#### Key operated:

All the temperature settings and switching between different temperature modes is done on the Reco Master key pad.

#### Externally controlled:

The temperature settings are done on the keypad. A switch between the different temperature modes is done by an external unit (eg a timer) through the limit switch connection.

#### Reco Room Unit available:

No signals are transmitted when the OFF mode is on. In OFF mode the room units take over the heaters and regulates them according to their local settings. The Reco Master takes over the regulation of all the heaters when the ON mode is active

#### No Reco Room Units available:

In the OFF mode all heaters are regulated to 5 degrees, or a non freezing mode. In ON mode you can choose between day or night temperature.

#### Display symbols:

Externally controlled room units ☾☾☾ Externally controlled without room units ☾☾☾  
Key operated room units ☀☀☀ Key operated without room units ☀☀☀

#### \*Standard temperature - Day mode

Press the sun symbol ☀ (the sun symbol appears in the display) set the desired day temperature by using the plus and minus buttons. The display is showing the chosen temperature with blinking numbers. Wait a few seconds after you are done, when the numbers stop blinking the new setting is activated.

#### \*\*Night temperature - Night mode

Press the moon symbol ☾ (the moon symbol appears in the display) set the desired night temperature by using the plus and minus buttons. The display is showing the chosen temperature with blinking numbers. Wait a few seconds after you are done, when the numbers stop blinking the new setting is activated.

#### \*\*\*ON/OFF - Stand-by mode

The Roundline Reco Master never completely. If Reco Room Units are available the Reco Master only show two horizontal lines in the OFF mode, and the different temperature settings are shown on the different room unit displays. If Reco Room Unit are not available the central control will show a snowflake and the temperature 5 degrees, i.e. non freezing mode, in the OFF mode. The day or night temperature, depending on which one is active, is always shown in ON mode.

*The current temperature setting and which mode is active are displayed at all times, unless the unit is turned off or a room unit is available. Then the display shows two horizontal lines, and the temperature setting is shown in the different displays on the room units. The set temperature for each function are stored in the memory the next time the function is activated.*

### CONNECTION OF EXTERNAL CONTROL EQUIPMENT

Roundline Reco Master has two two limit switch screw connections on the back, one for Day or Night and one for ON or OFF. When open is the day/night in Day mode and on/off in OFF mode. Connect the desired equipment that you want to activate the different temperature settings with as follows:



If you only want to switch between day and night temperature, you can close the ON/OFF contact with a short jumper.

### COMMON QUESTIONS AND TROUBLESHOOTING

*The green light emitting diode on the radio receiver is blinking. Why?*

It means that it has no contact with any Reco Master or Reco Room unit. The heater will continue to use the last set order it received before the communication was broken. Try to connect the Reco Master and the RF-plug again as above. If it still does not work contact Tego.

*How can I be sure that the heaters are connected to the Reco Master?*

By pressing the MODE and ON/OFF buttons at the same time on the keypad on the Reco Master, and holding them pressed down for 3 seconds. On all the heaters that are connected a light on the RF-plug will turn on during the count down off 30 seconds that are shown on the display.

*I have had a power failure. Do I have to redo the installation when the power is turned back on?*

No. The RF-plug has a built-in memory. As soon as the power comes back the system will function as before.